


SEPTAGE RECEIVING

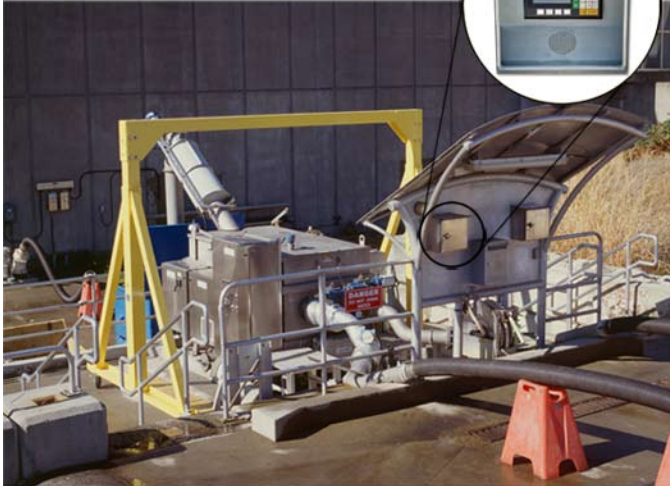

Access Terminals

AT



Our **Septage Receiving** Access Terminal can be added to your existing Septage Receiving Stations, adding access security and the ability to generate significant revenue from your existing infrastructure.

EACH SYSTEM INCLUDES:

Stainless Steel Access Terminal.

Data communication with the system can be via a variety of methods, including direct (serial or ethernet), dial-up modem, 1x cellular and radio.

The **Access Terminal** interfaces with **Septage+™** System Administration Software.

OPERATION SEQUENCE:

1. Connect fill hose to Septage Receiving Station
2. Proceed to Access Terminal:
 - ▣ Input 3 Digit Customer Access # – Press “Enter”
 - ▣ Input 4 Digit Security Pin # – Press “Enter”
 - ▣ Input Generator of Waste – Press “Enter”
 - ▣ Input Waste Classification – Press “Enter”
 - ▣ Customer account balance is displayed (for Pre-Paid Customers) – Press “Enter”
 - ▣ Input desired fill quantity – Press “Enter”
 - ▣ Press “Start” to open Wastewater Transfer Valve
 - ▣ Open Truck Transfer Valve to release waste
 - ▣ Press “Stop” to close Wastewater Transfer Valve

Wastewater Transfer Valve will close after 60+ seconds (adjustable) if “No Flow”.

Each transaction is date and time stamped and recorded by **Septage+™**.



Municipal Solutions

877.655.5585 F 888.655.5588

www.municipal-solutions.com